 


Pitching Masjid Tent with Air Duct 36 m²




KIZILAY ÇADIR & TEKSTİL

Contents of the crate

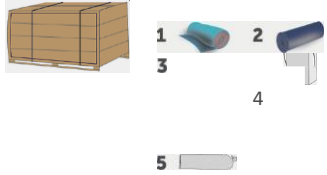


No	Explanation	Piece
1	Tent	1
2	Porch	1
3	Floor PE Tarpaulin	1
4	Kit	1
5	Saddlebag	1

 Contents of the Kit

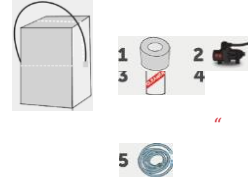

No	Explanation	Piece
1	Glue	1
2	Air Pump	1
3	Cleaner	1
4	Polyester Parts	5
5	Air Hose	1

 
Contents of the Pile Saddlebag

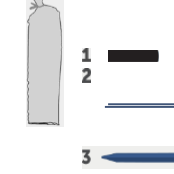

No	Explanation	Piece
1	Hammer	1
2	Nail Pile	4


1) LAYING THE TENT

Lay the floor on the place where the tent will be pitched. Arrange the tent evenly on the floor to allow it to inflate comfortably.

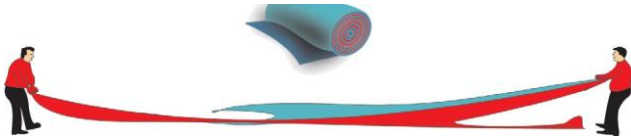

2) INFLATING THE TENT

Attach the air hose connected to the engine to the air intakes. Connect the motor to 220 W AC current and start the motor. (Make sure that the air enters the tent comfortably by adjusting the air ducts. Otherwise, the inflation time of the tent will be extended.)

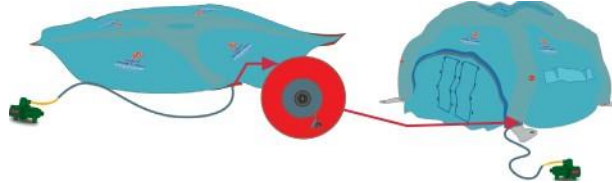

3) RAISING THE TENT

When the tent starts to rise, facilitate the air flow and help the feet to rise by giving support from inside the tent.

Wait until the tent is completely inflated. After inflation, turn the latch inside the valve to the left and block the air outlet.



4) FIXING THE TENT

Fix the tent to the ground from the capsule places on its feet. Tighten the tension ropes on the sides of the tent tightly with the driven T-piles.



5) LAST CHECK & SUGGESTIONS

Combine the porch on the front of the tent with the zipper on the body and inflate it with an electric air motor. Tighten the T-pile with a rope attached to the D buckle at the end. After the tent installation is completed, keep the equipment in the saddlebag in such a way that it will not be damaged. "The tent is ready for use.

