 


AIR DUCT EVENT TENT 4*4m

Contents of the

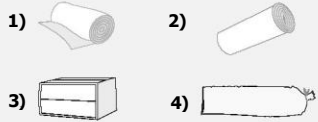

No	Explanation	Piece
1	Body Saddlebag	1
2	Side Curtains	4
3	Air Pump and Repair Kit Saddlebag	1
4	Pile Saddlebag	1

Contents of the Air Pump and Repair Kit



No	Explanation	Piece
1	Polyester Parts	3
2	Air Hose	1
3	Air Pump	1
4	Glue	1
5	Cleaner	1


Contents of the Pile



No	Explanation	Piece
1	Hammer	1
2	Nail Pile	4
3	T-Pile	4


1) LAYING THE TENT

In order for the tent to inflate comfortably, lay it

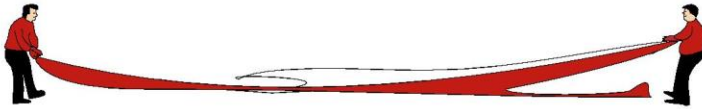

2) INFLATING THE TENT

Attach the air hose connected to the engine to the air intakes. Connect the motor to 220 W AC current and start the motor. (Make sure that the air enters the tent comfortably by adjusting the air ducts. Otherwise, the inflation time of the tent will be extended.)

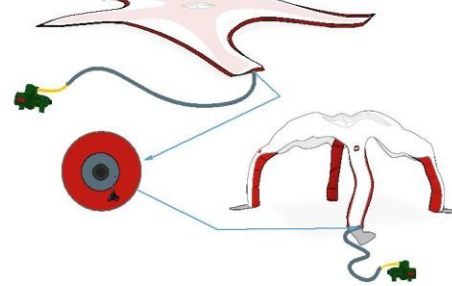


3) RAISING THE TENT

When the tent starts to rise, help the feet to rise by giving support from inside the tent to facilitate the air flow, wait until the tent is fully inflated. After inflation, turn the latch inside the valve to the left and block the air outlet.




4) FIXING THE TENT

Fix the tent to the ground from the capsule places on its feet. Tie the tent tightly with the stakes you have driven into the feet from the tension ropes on the sides. Fasten the side curtains with a zipper.

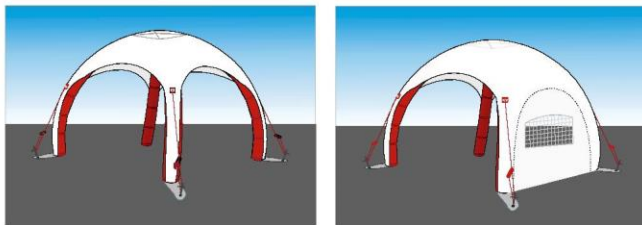

5) FINAL CHECK &

Check the tension ropes of the tent every 2-3 days. If the tension ropes of the tent are loose or the air in the columns is reduced, sagging will occur in the roof part. If necessary, stretch the tension ropes and press the air. Ensure that the tent is always fully stretched.

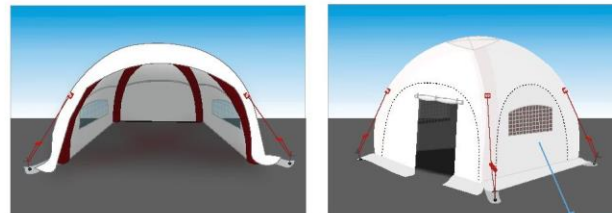

Side Curtains
(4 Pcs.)

